

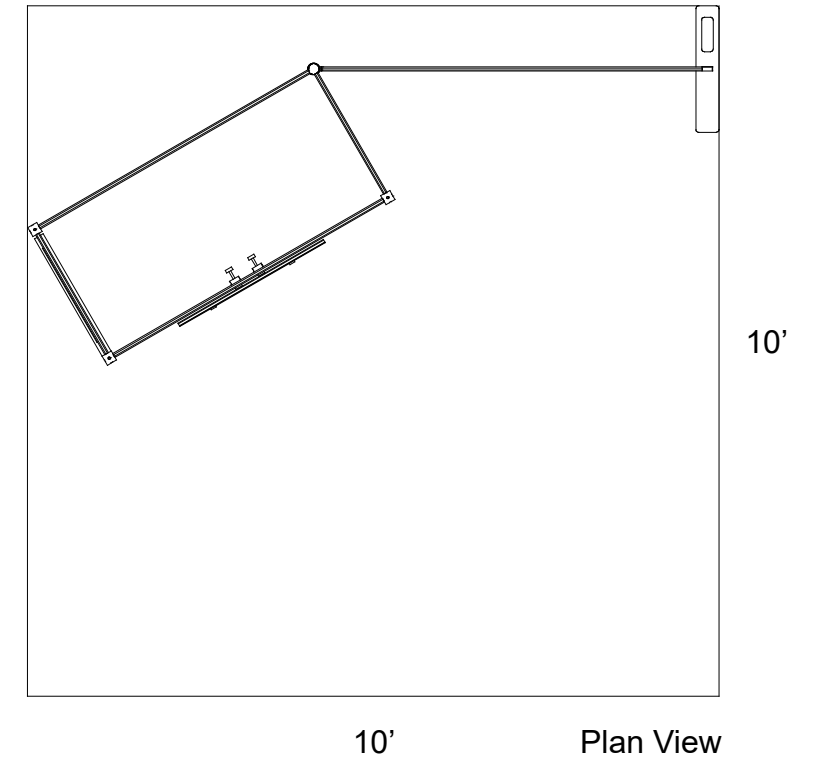


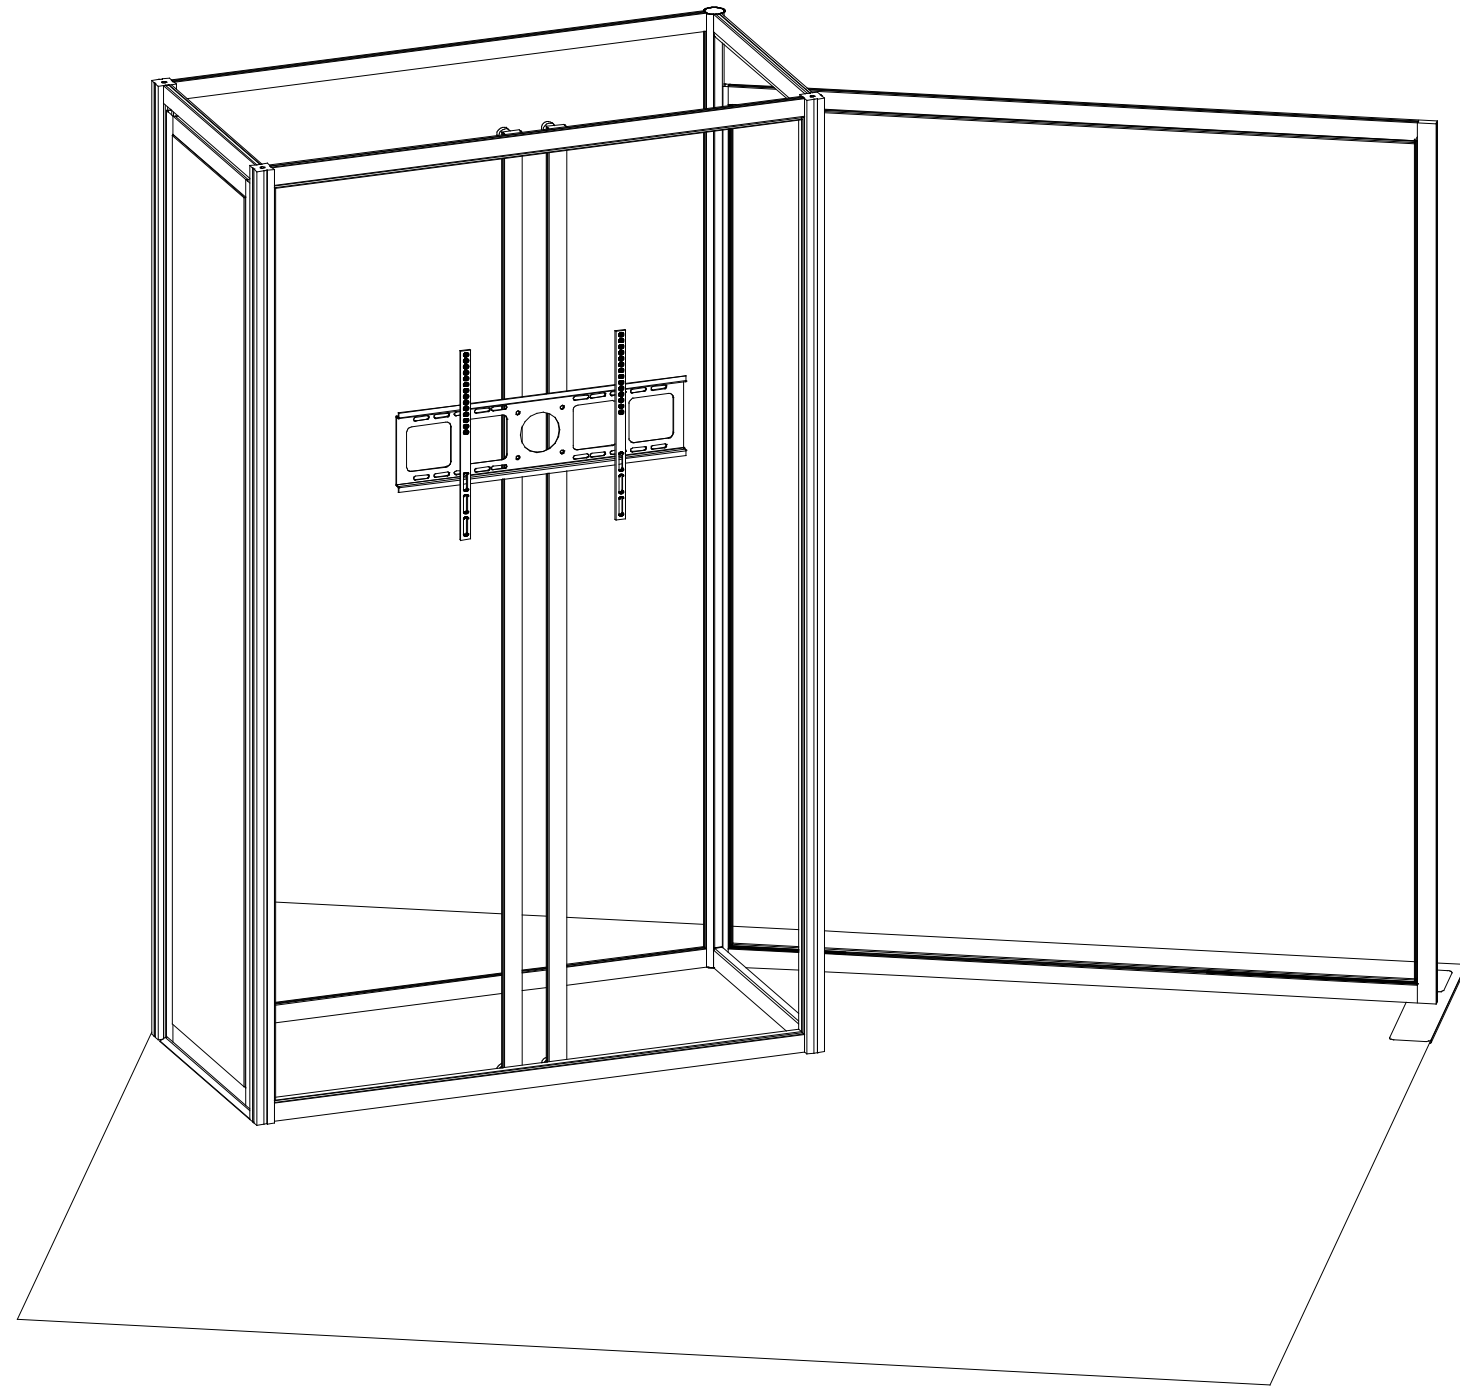

SETUP INSTRUCTIONS

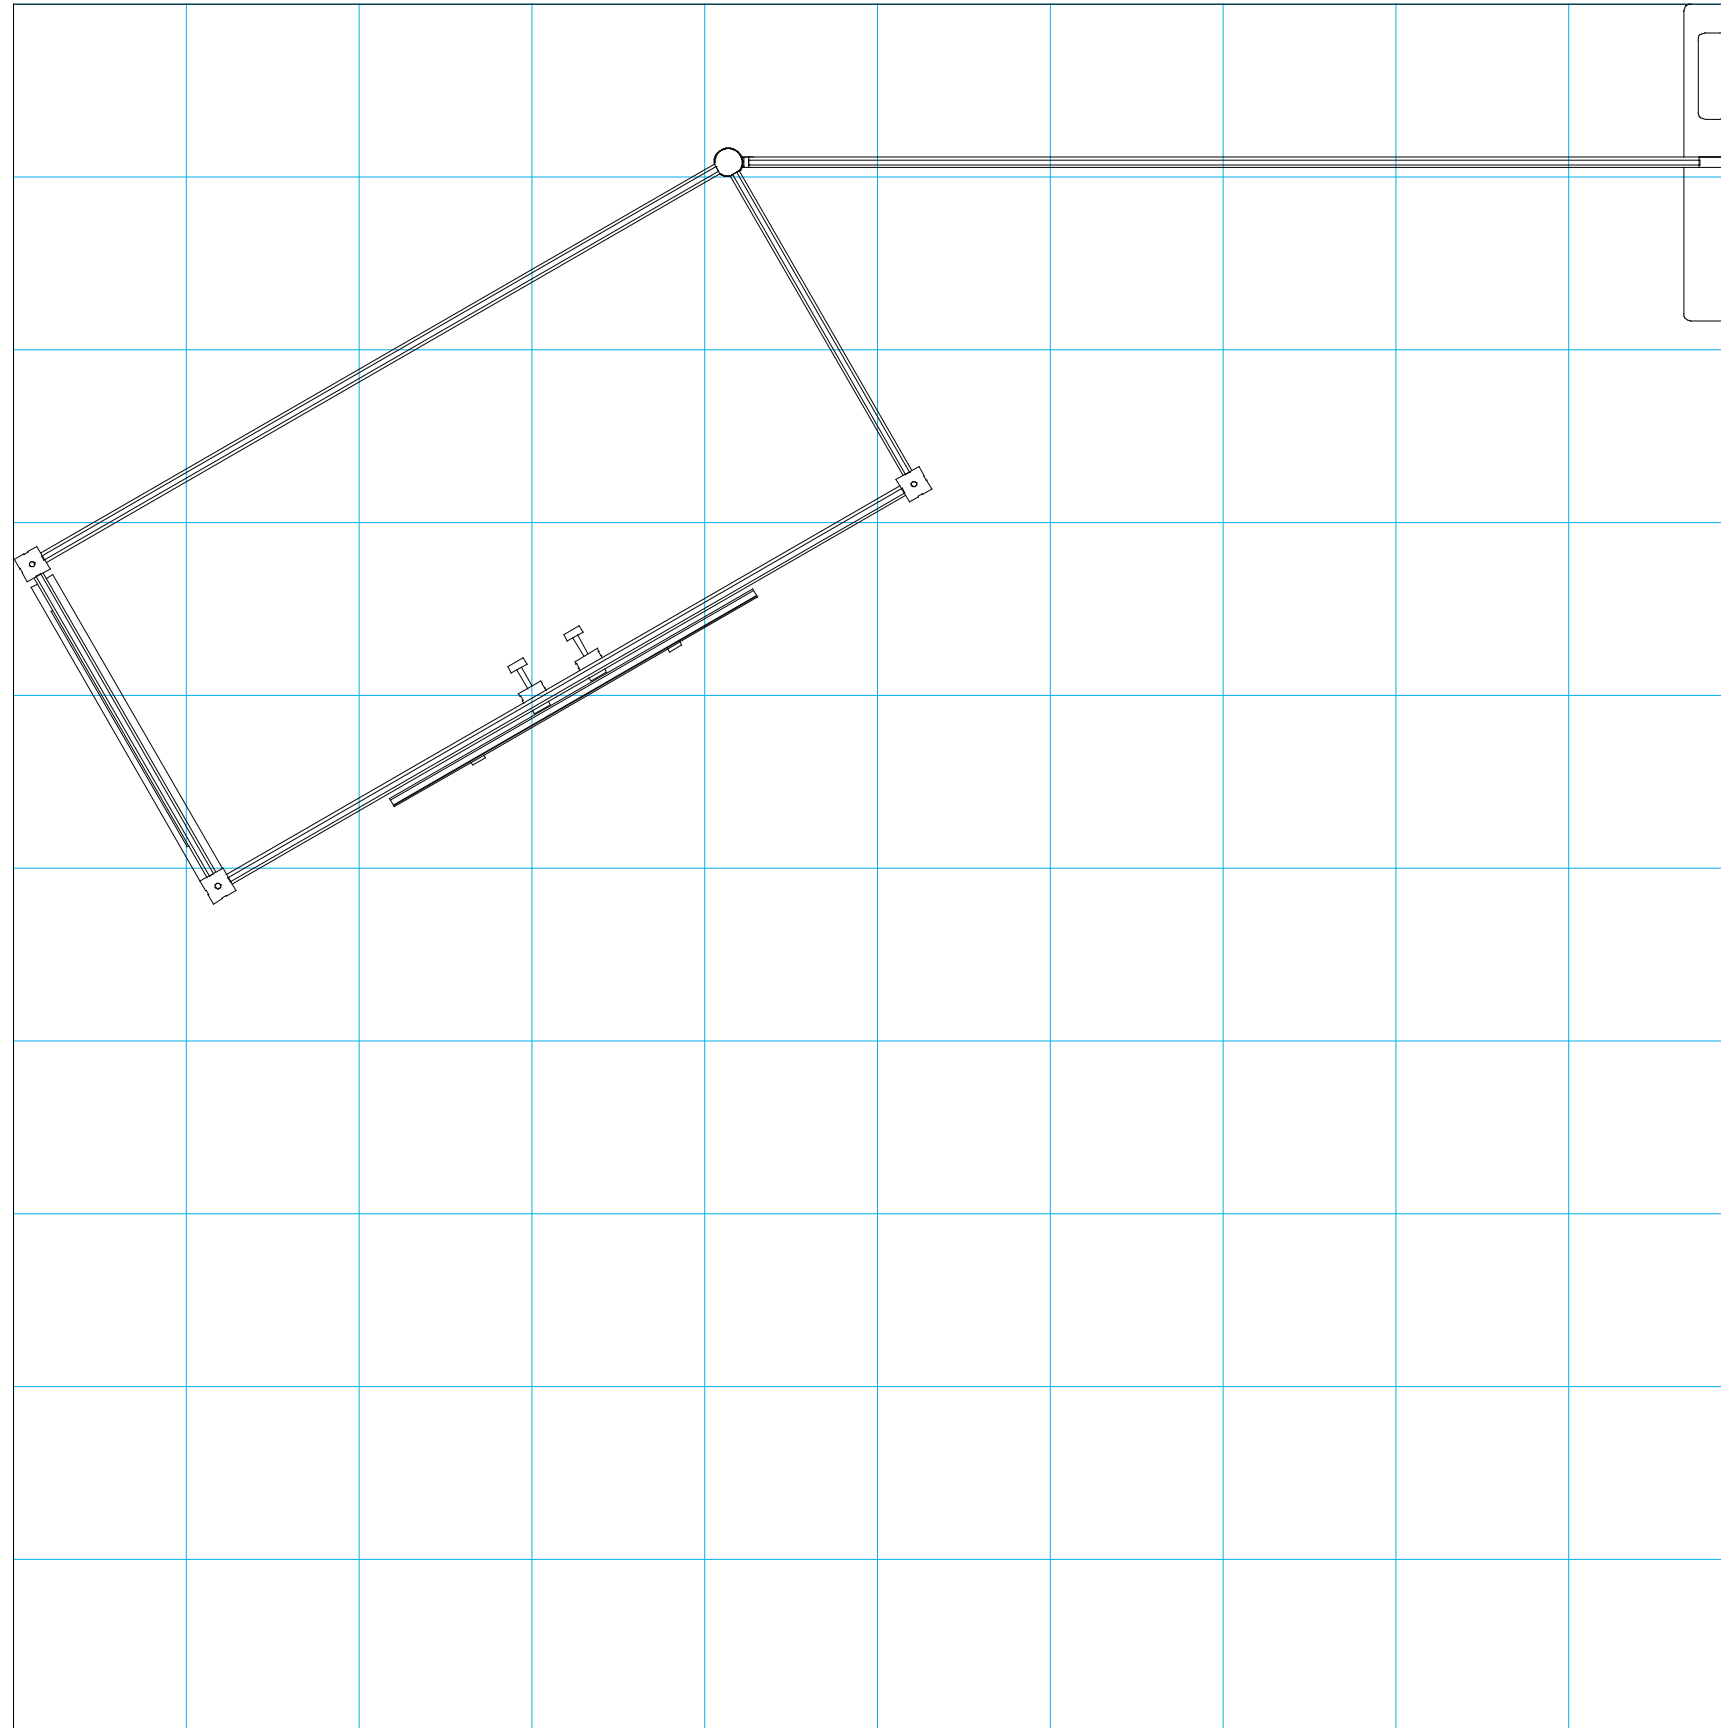

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

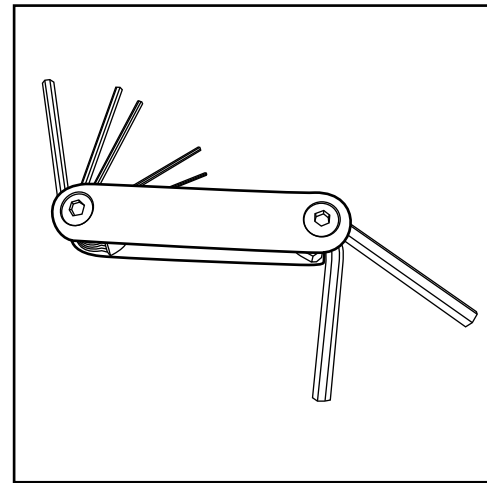


Hex Tool - Essential for Assembly

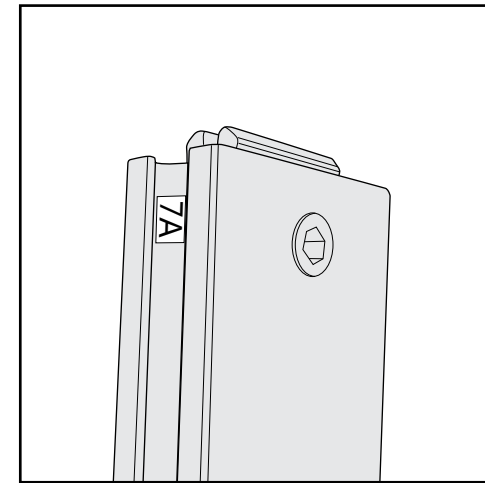


Part Identification - Numbering

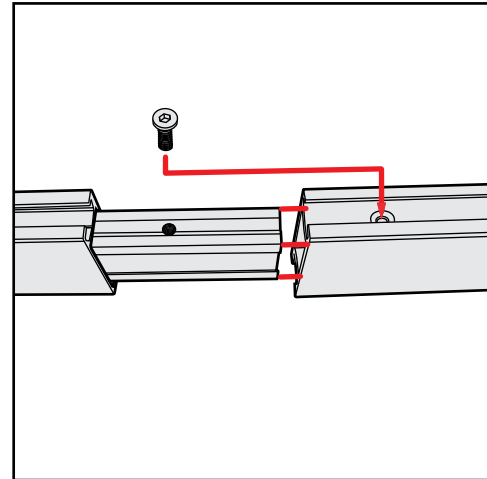


Spline Connection

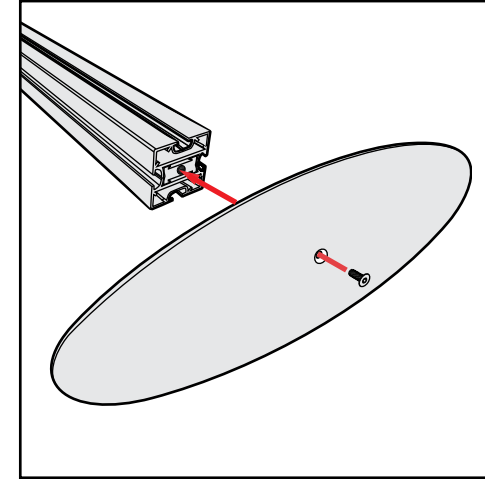

Base Plate & Extrusion Connection

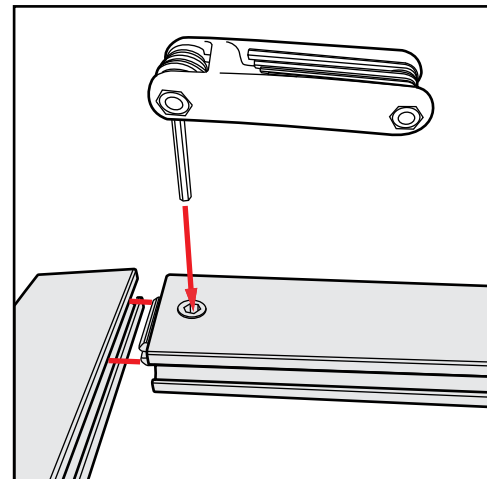

Extrusion & Lock Connection

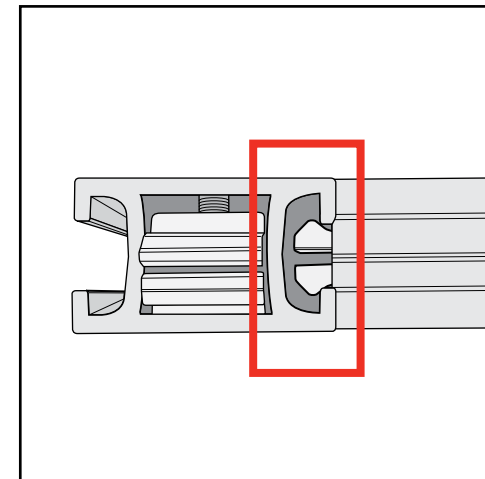


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

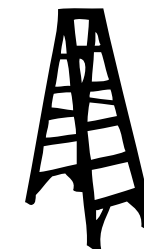

LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED




Item	Qty.	Description
1	1	96"h S44 Vertical Extrusion w/ Door Hinge
2	1	96"h S44 Vertical Extrusion w/ Door Stop & attached TSP3
3	1	96"h S44 Vertical Extrusion w/ attached TSP3
4	1	96"h RSG520 Vertical Extrusion w/ attached TSP3 & S11
5/5A	1/1	54"w Z45 Horizontal Extrusion w/ attached Velcro
6	1	24"w Z45 Horizontal Extrusion
7/7A	1/1	24"w Z45 Horizontal Extrusion w/ attached TSP3
8/8A	1/1	54"w Z45 Horizontal Extrusion w/ attached TSP3
9/9A	1/1	96"h Z45 Vertical Extrusion

Steps:


- 1) Attach lower horizontals [5,7,8] & door threshold between verticals [1,2,3,4].
- 2) Connect upper horizontals [5A,6,7A,8A] between verticals [1,2,3,4].
- 3) Attach verticals [9A,9B] to horizontals [8,8A], using screw caps. See **Vertical Attachment** detail.
- 4) Apply SEG graphics to front, right side & door.
- 5) Attach backer graphic to back side of assembly using Velcro.
- 6) Install Monitor Mount to verticals [9,9A]. See **Monitor Mount Attachment** detail.

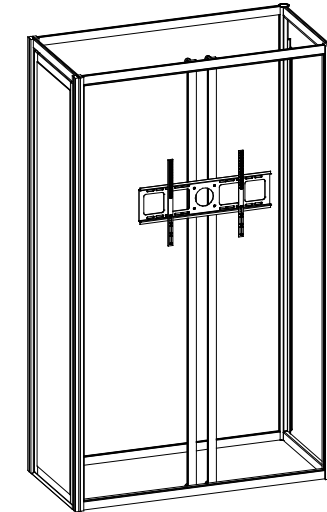

When partly assembled

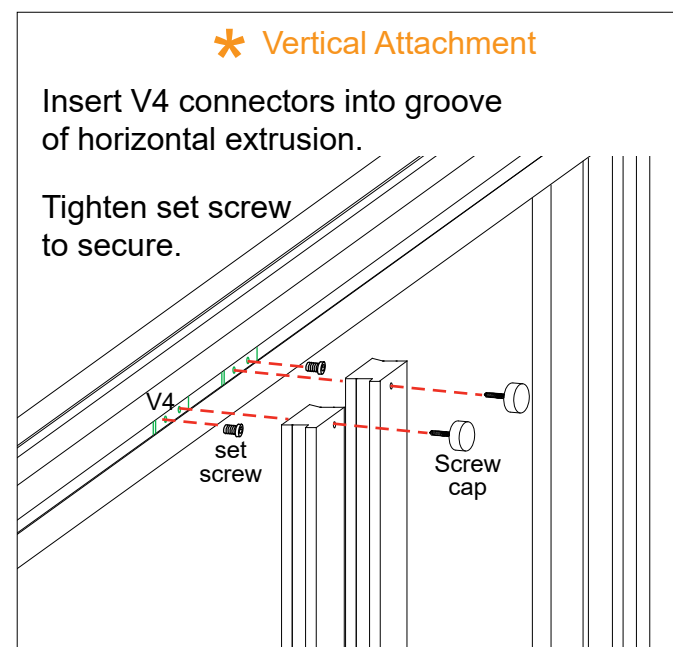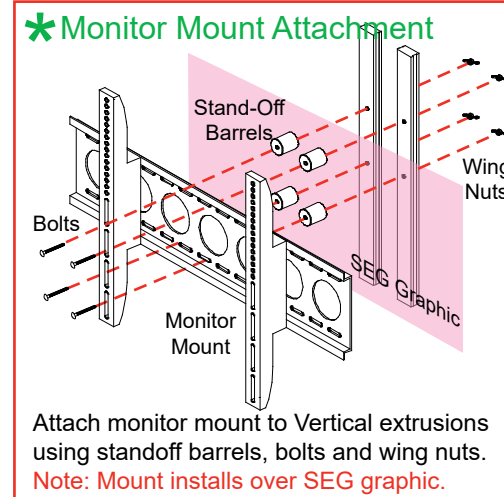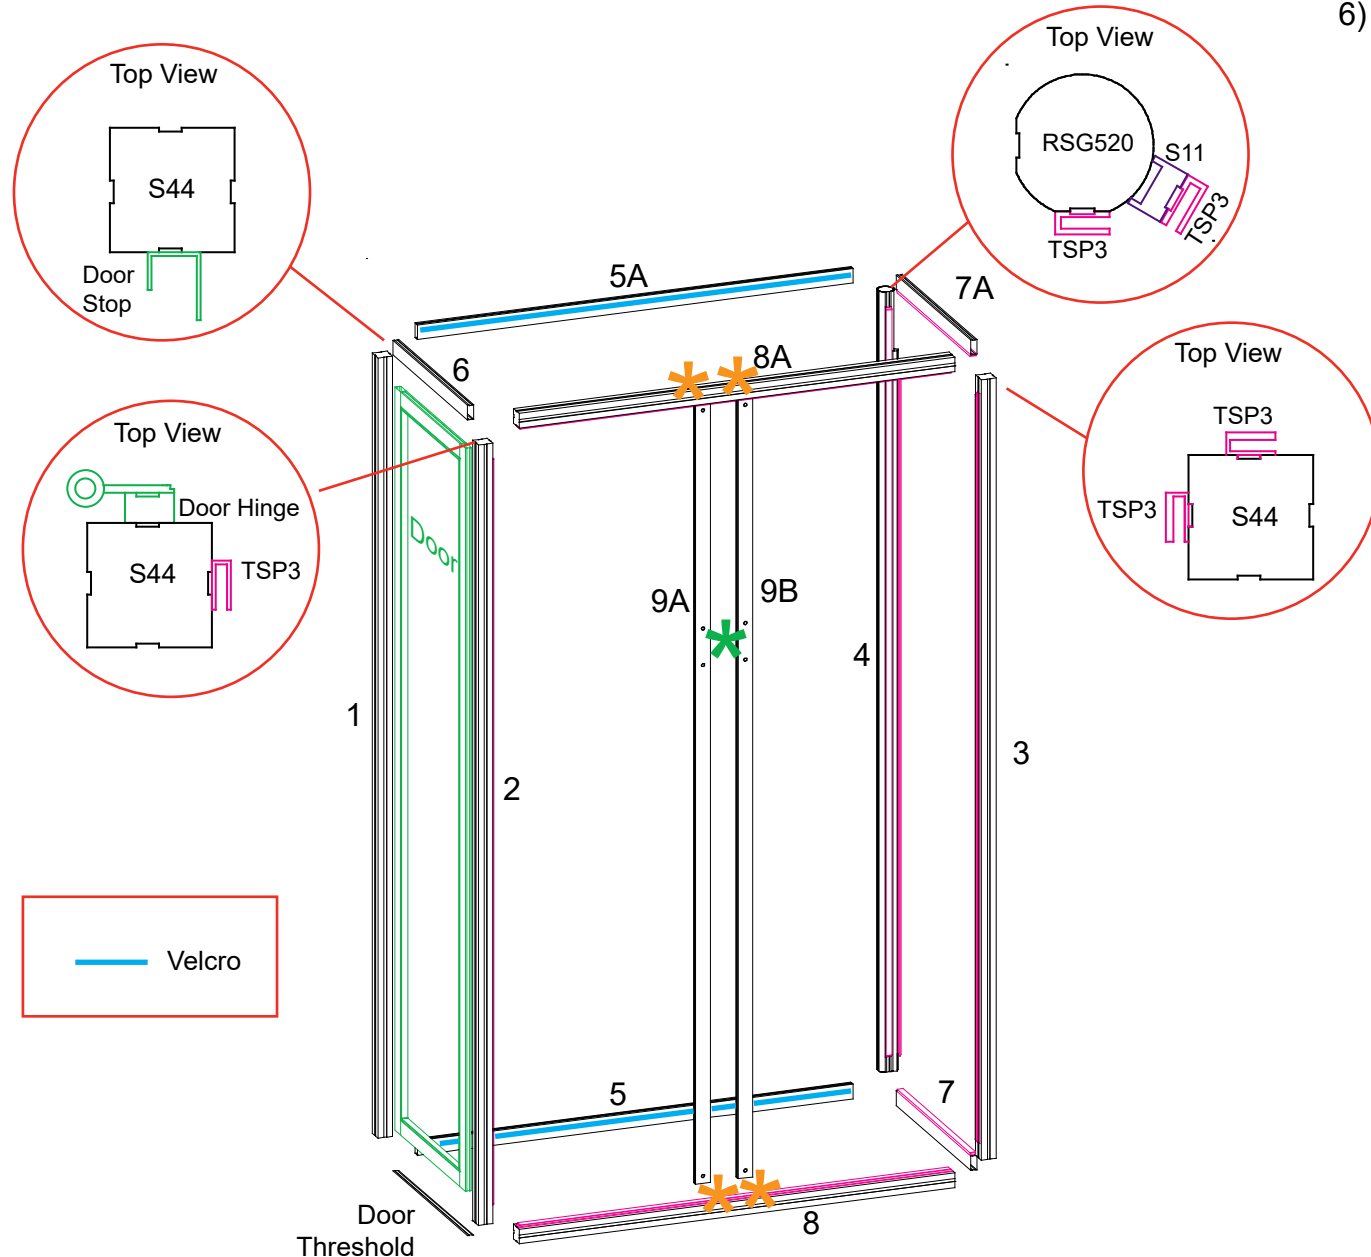

SEG Graphic Installation

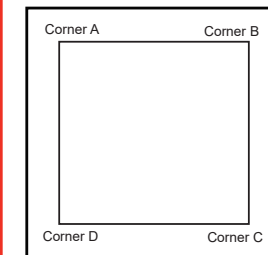

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.



Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal




To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

Item	Qty.	Description
14	1	88.583"h Z45 Vertical Extrusion w/ attached TSP3
15/15A	1/1	66"w Z45 Horizontal Extrusion w/ attached TSP3
19	1	Base Plate

Steps:

- 1) Attach Base Plate to vertical [14] using bolt.
- 2) Connect horizontals [15,15A] between vertical [14] and vertical [4] of assembled closet.
- 3) Apply SEG graphic to assembly.
- 4) Install lights as shown. See **Light Attachment** detail.

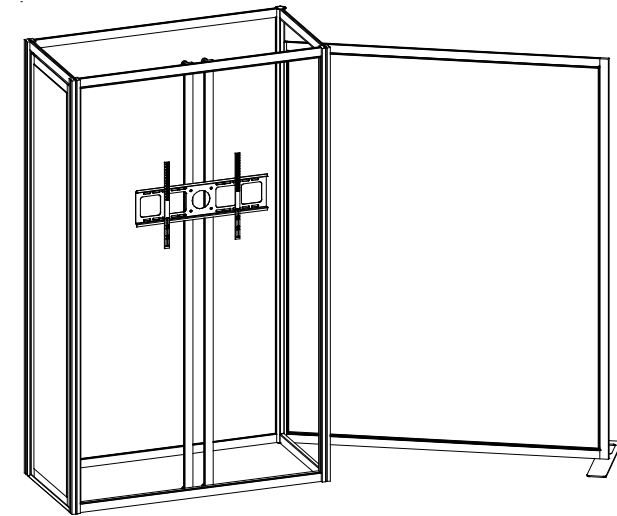

When assembled

