



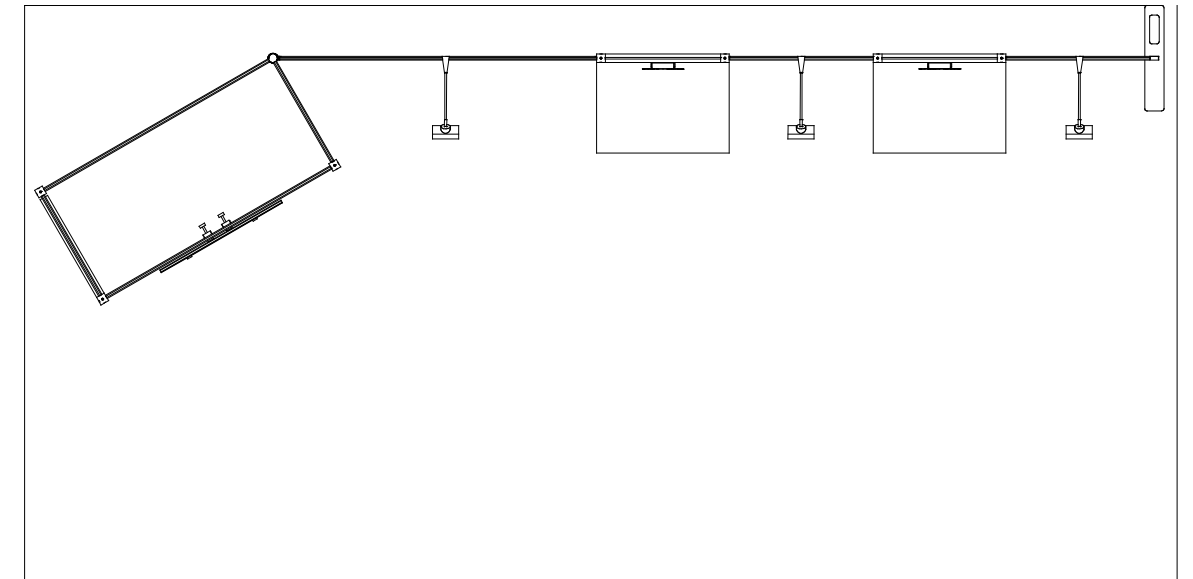


10'

20'

Plan View

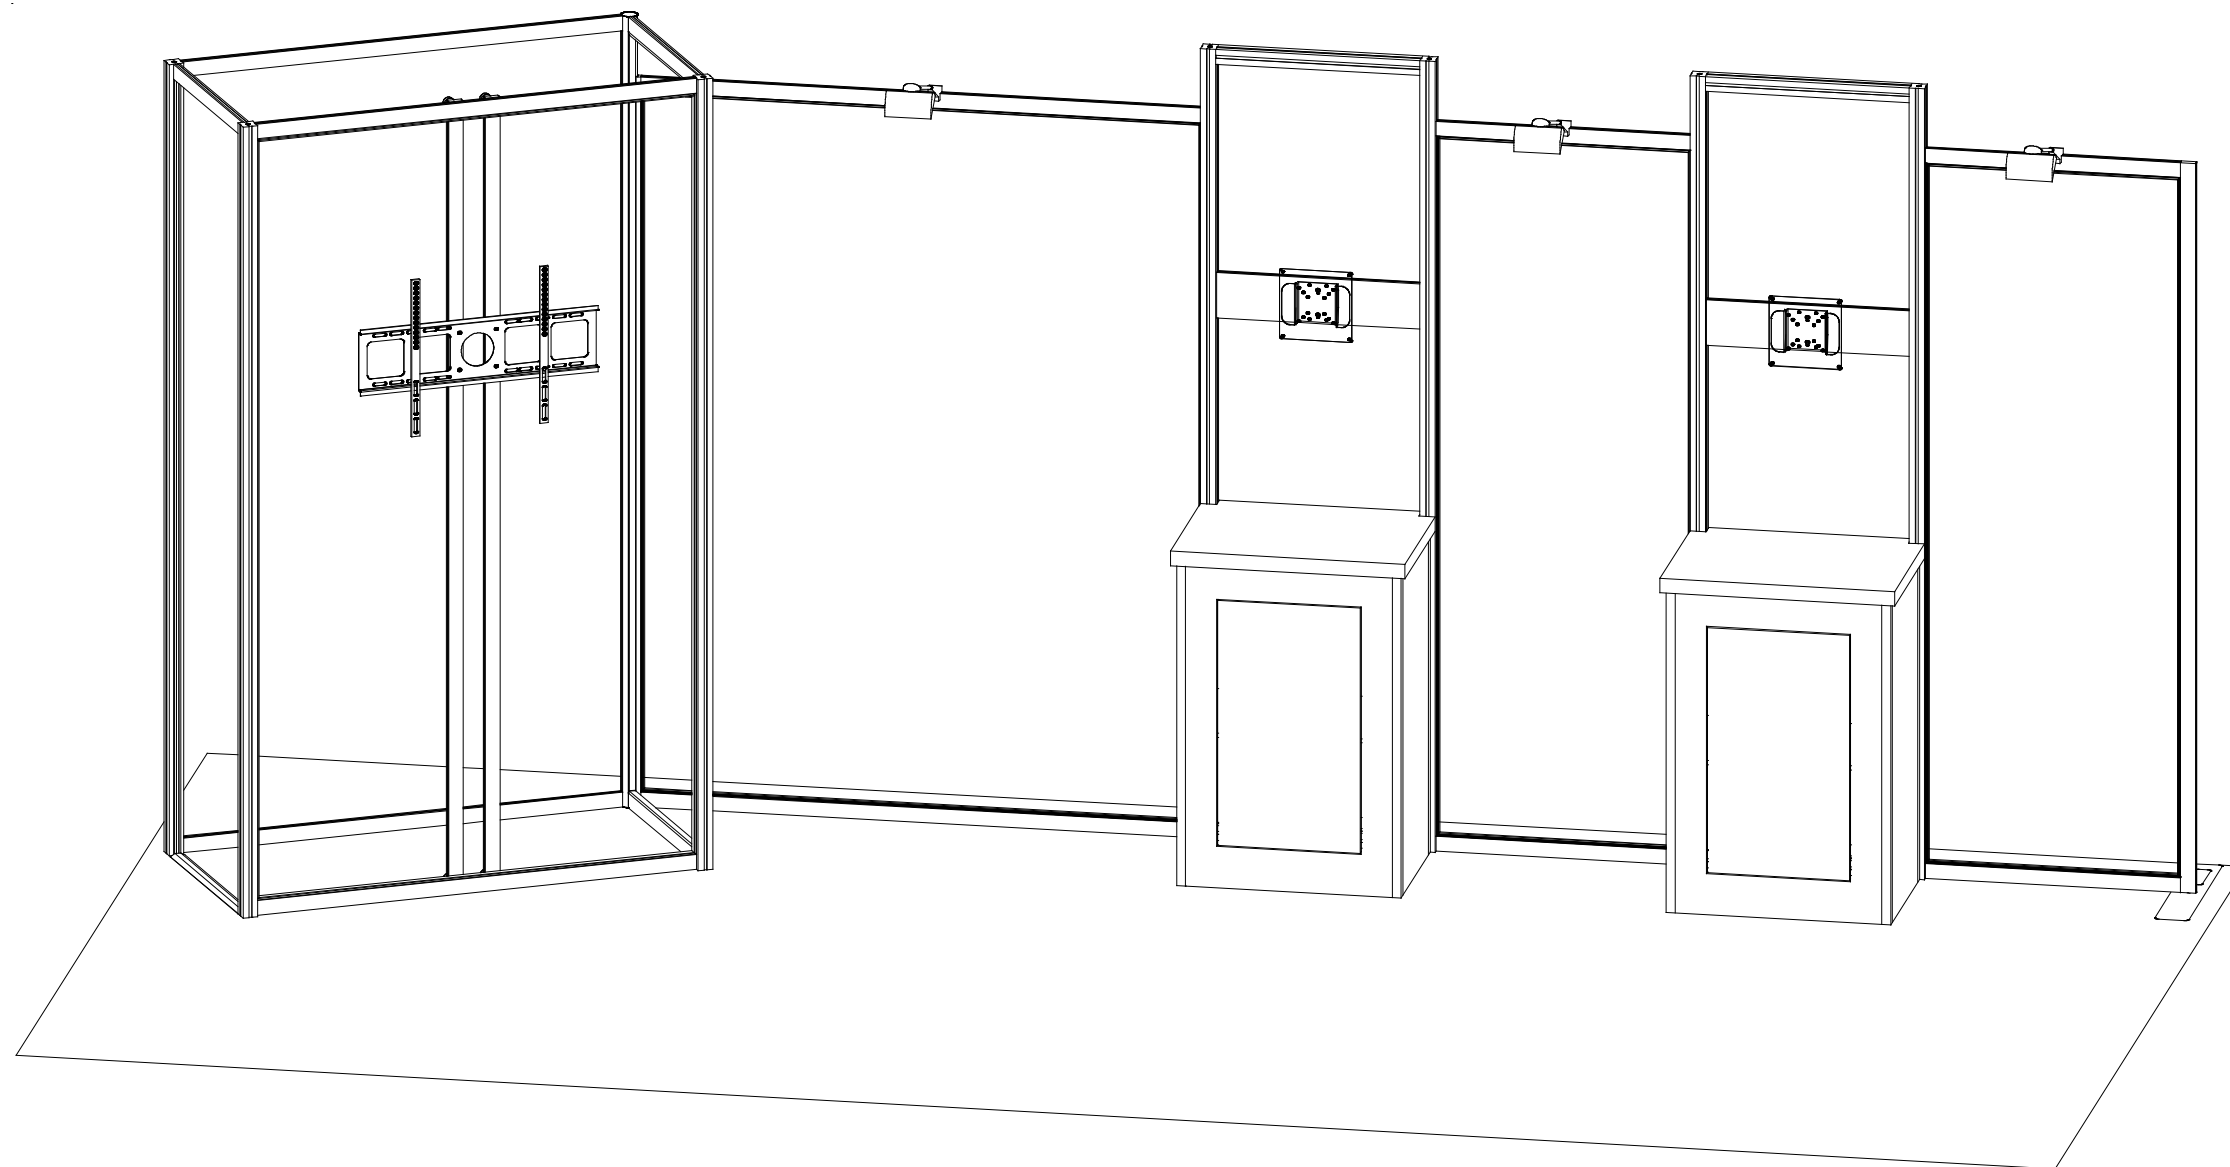

SETUP INSTRUCTIONS

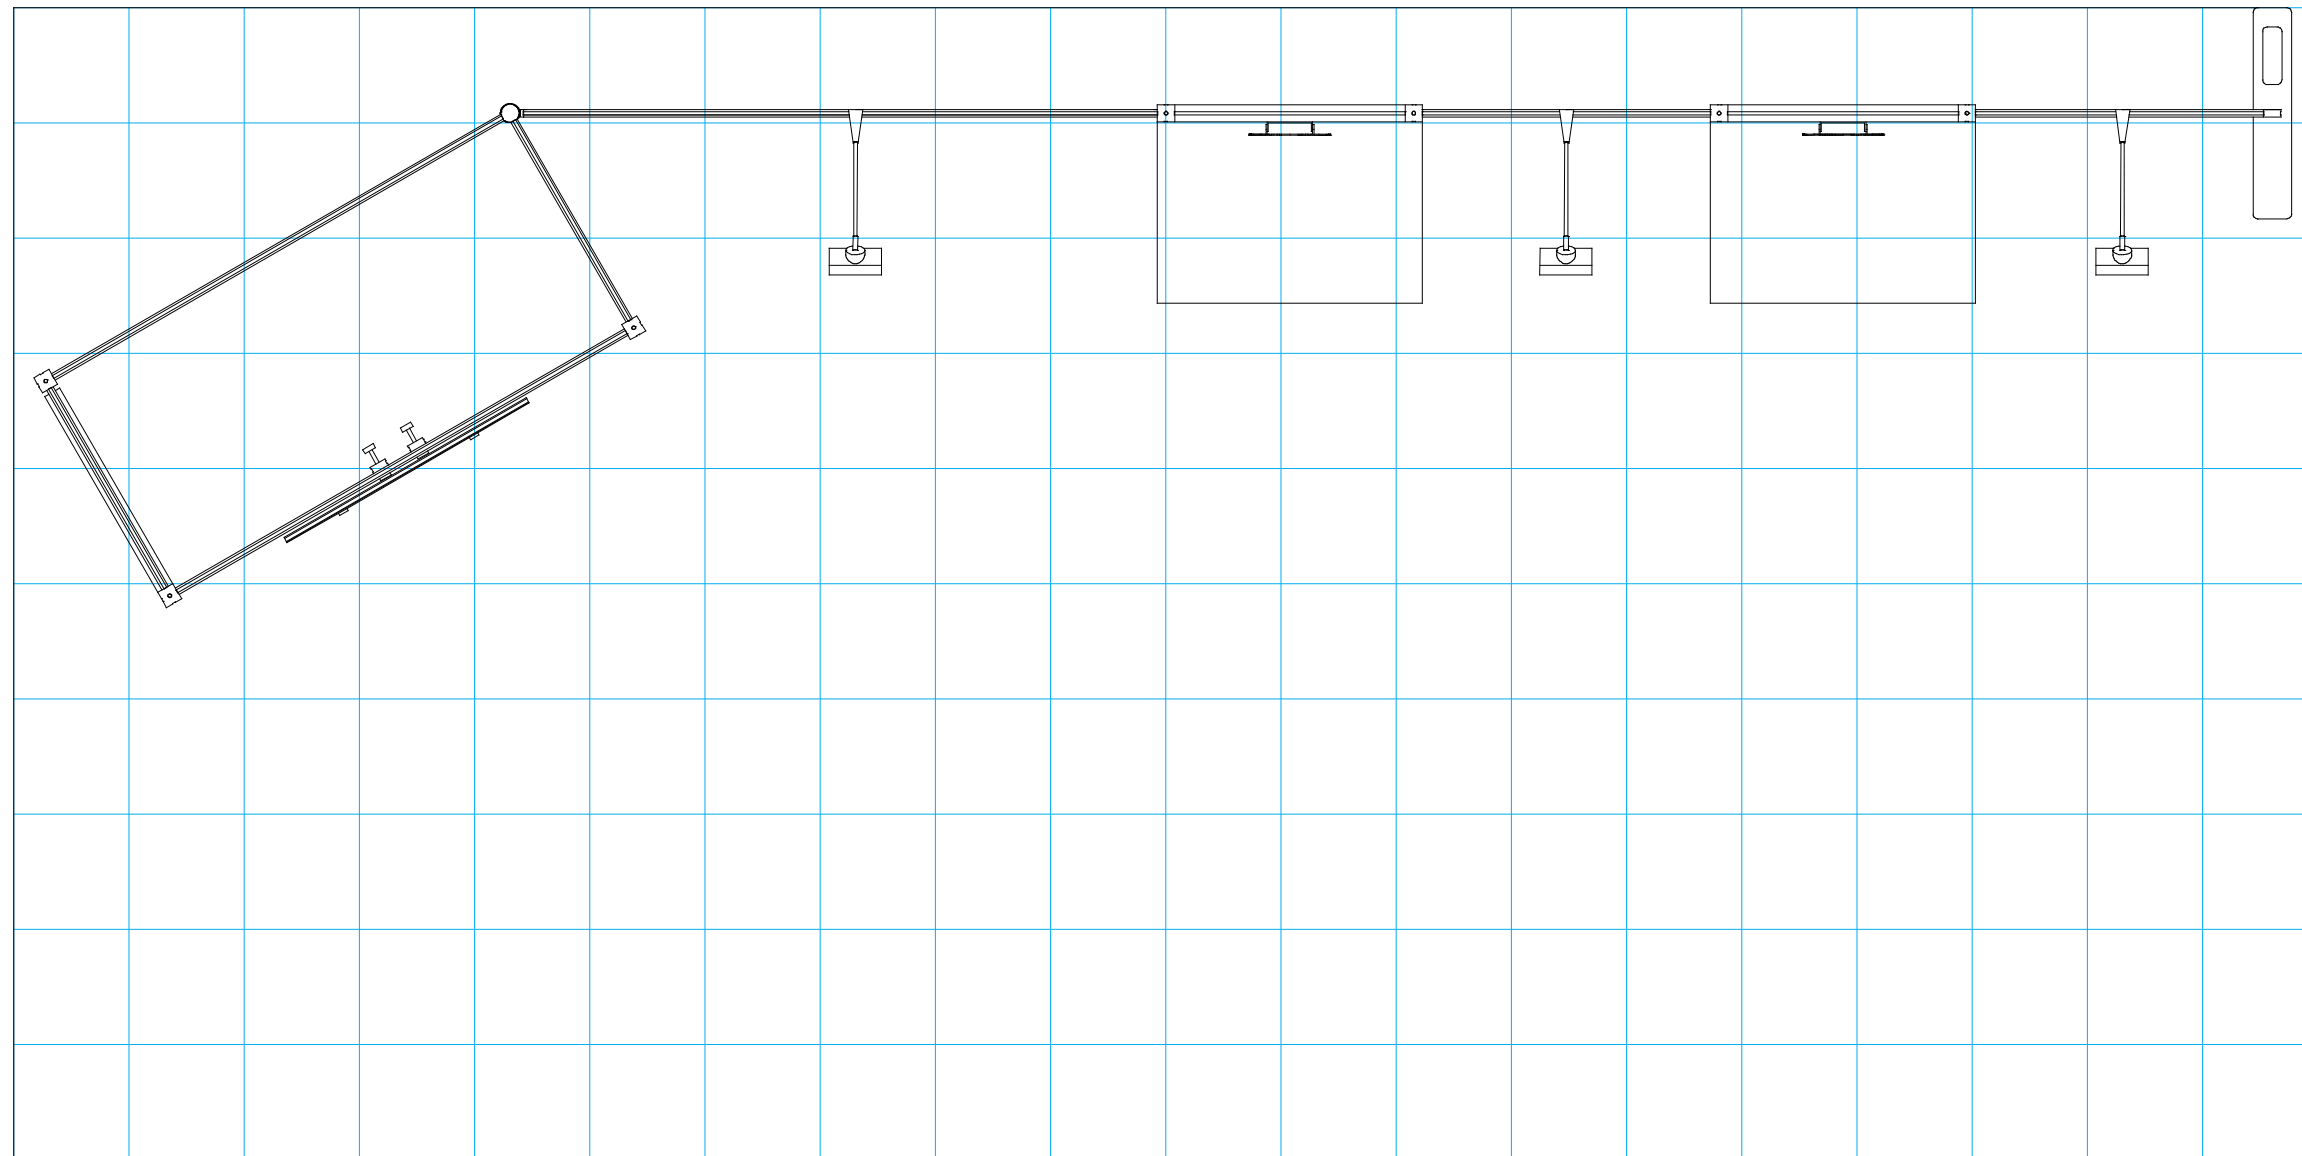

 = 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

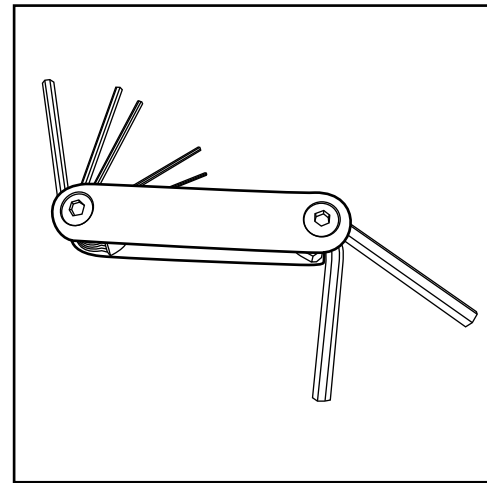


Hex Tool - Essential for Assembly

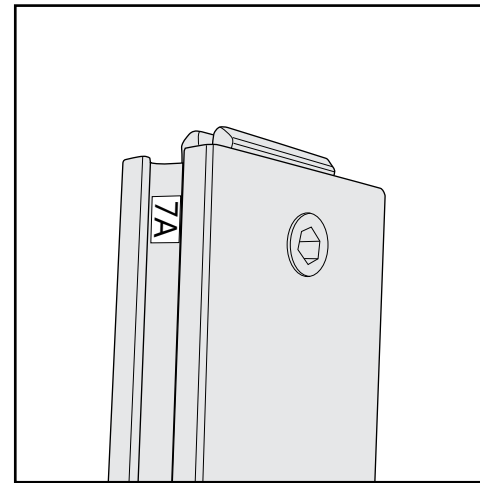


Part Identification - Numbering

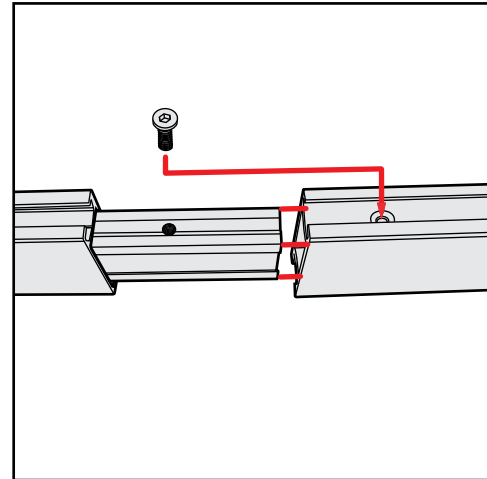


Spline Connection

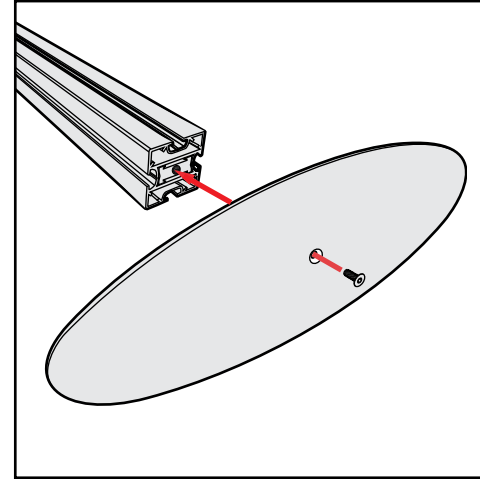

Base Plate & Extrusion Connection

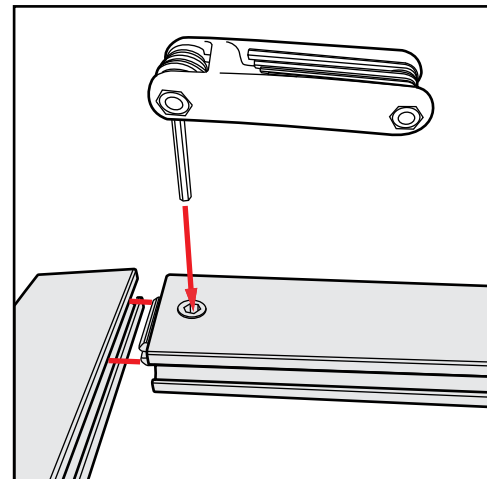

Extrusion & Lock Connection

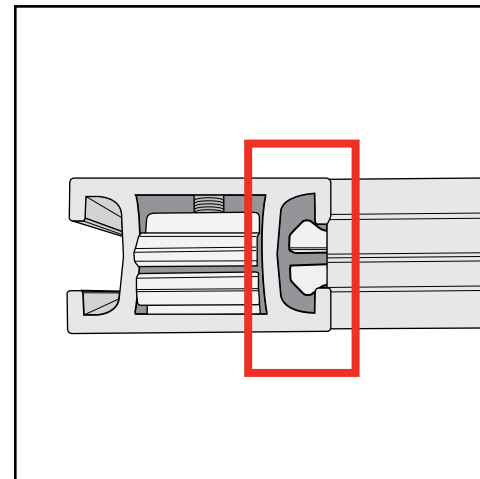


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

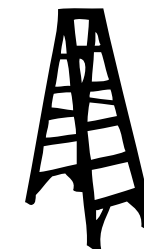



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

ECO Panel Install


- 1 Place ECO panel together with a vertical offset, slide down to lock connector in place.
- 2 Panel Corner Connectors are installed just like ECO panels. Remove by off-setting top lock clips horizontally followed by separating vertically.

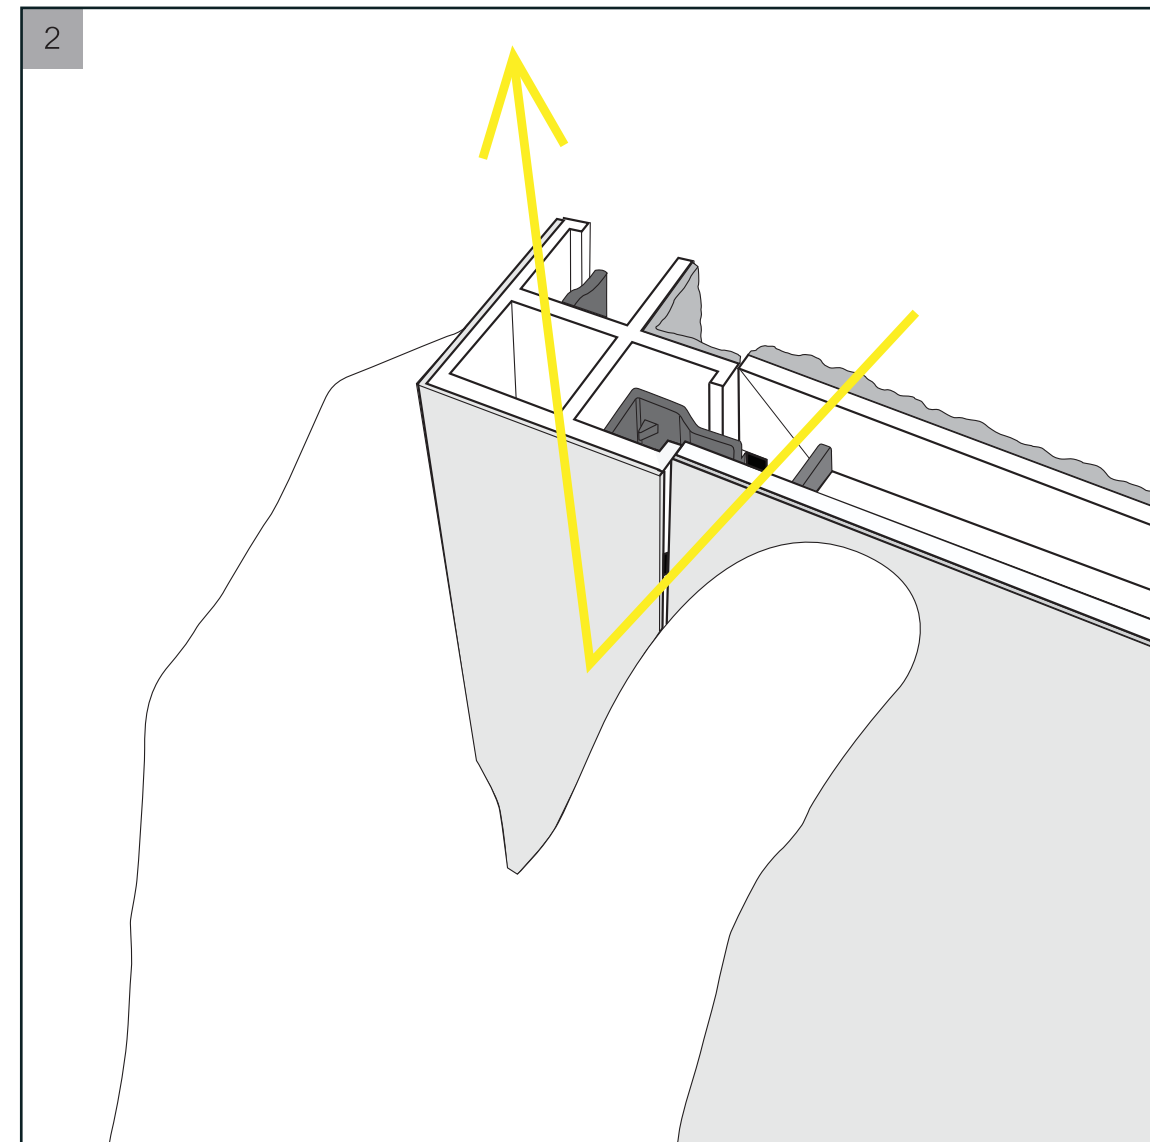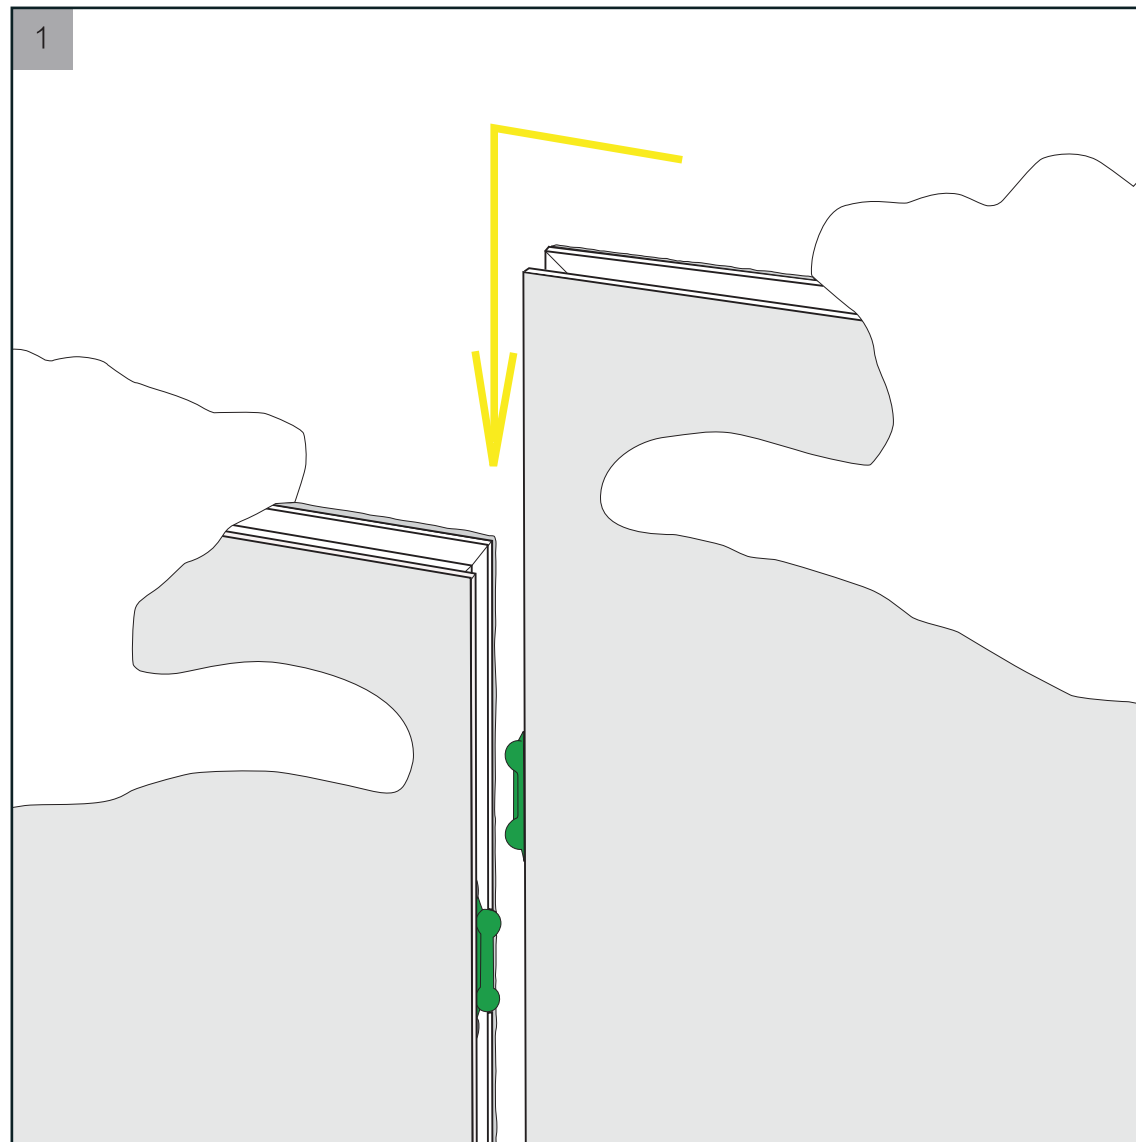


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

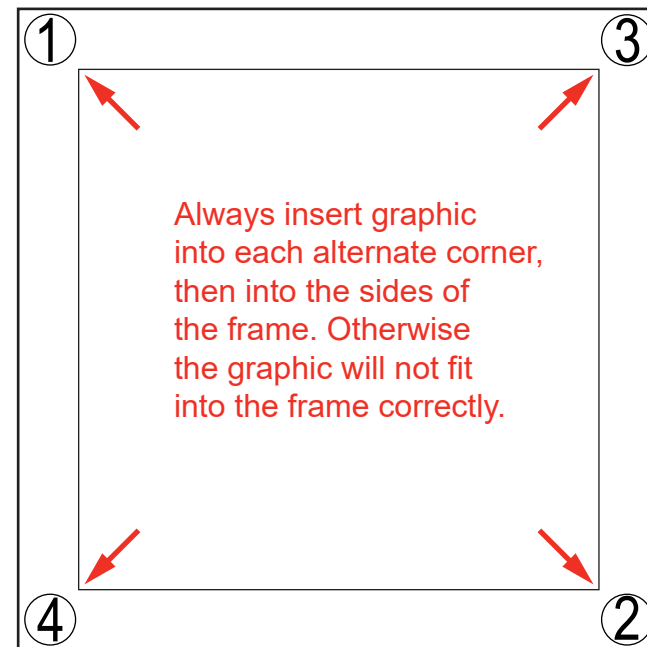

STEP 2: Attach Middle

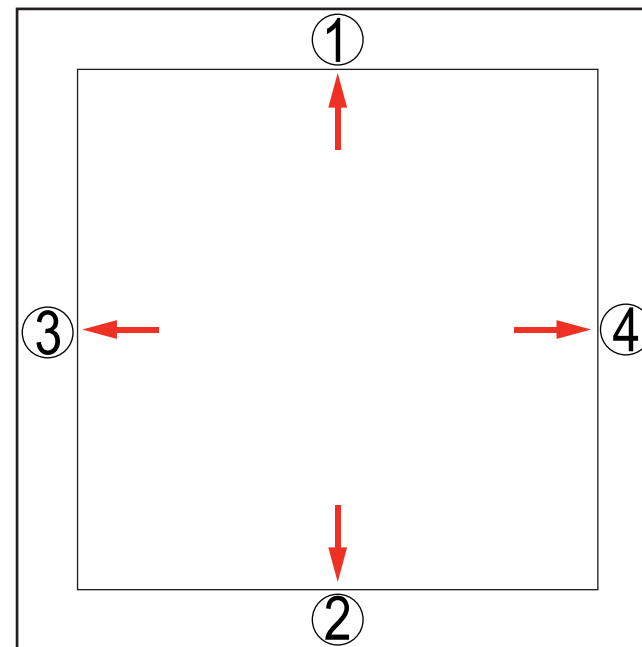

STEP 3: Attach Sides

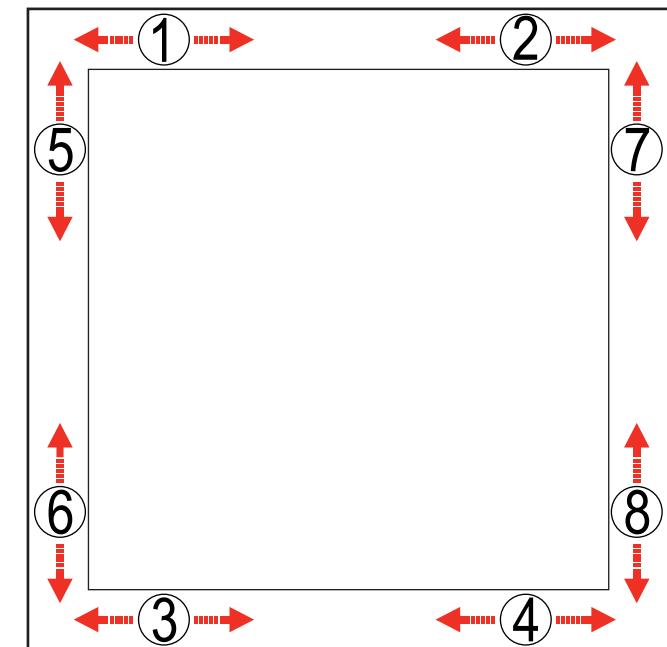

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:




CRATE PACKING


Item	Qty.	Description
1	1	96"h S44 Vertical Extrusion w/ Door Hinge
2	1	96"h S44 Vertical Extrusion w/ Door Stop & attached TSP3
3	1	96"h S44 Vertical Extrusion w/ attached TSP3
4	1	96"h RSG520 Vertical Extrusion w/ attached TSP3 & S11
5/5A	1/1	54"w Z45 Horizontal Extrusion w/ attached Velcro
6	1	24"w Z45 Horizontal Extrusion
7/7A	1/1	24"w Z45 Horizontal Extrusion w/ attached TSP3
8/8A	1/1	54"w Z45 Horizontal Extrusion w/ attached TSP3
9/9A	1/1	96"h Z45 Vertical Extrusion

Steps:


- 1) Attach lower horizontals [5,7,8] & door threshold between verticals [1,2,3,4].
- 2) Connect upper horizontals [5A,6,7A,8A] between verticals [1,2,3,4].
- 3) Attach verticals [9A,9B] to horizontals [8,8A], using screw caps. See **Vertical Attachment** detail.
- 4) Apply SEG graphics to front, right side & door.
- 5) Attach backer graphic to back side of assembly using Velcro.
- 6) Install Monitor Mount to verticals [9,9A]. See **Monitor Mount Attachment** detail.

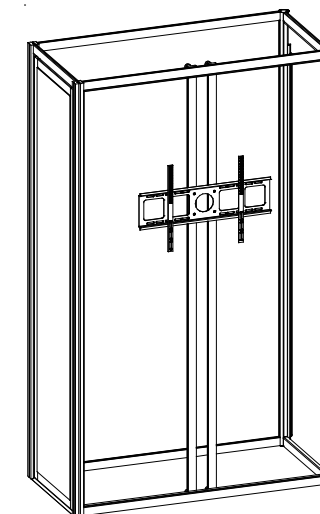

When partly assembled

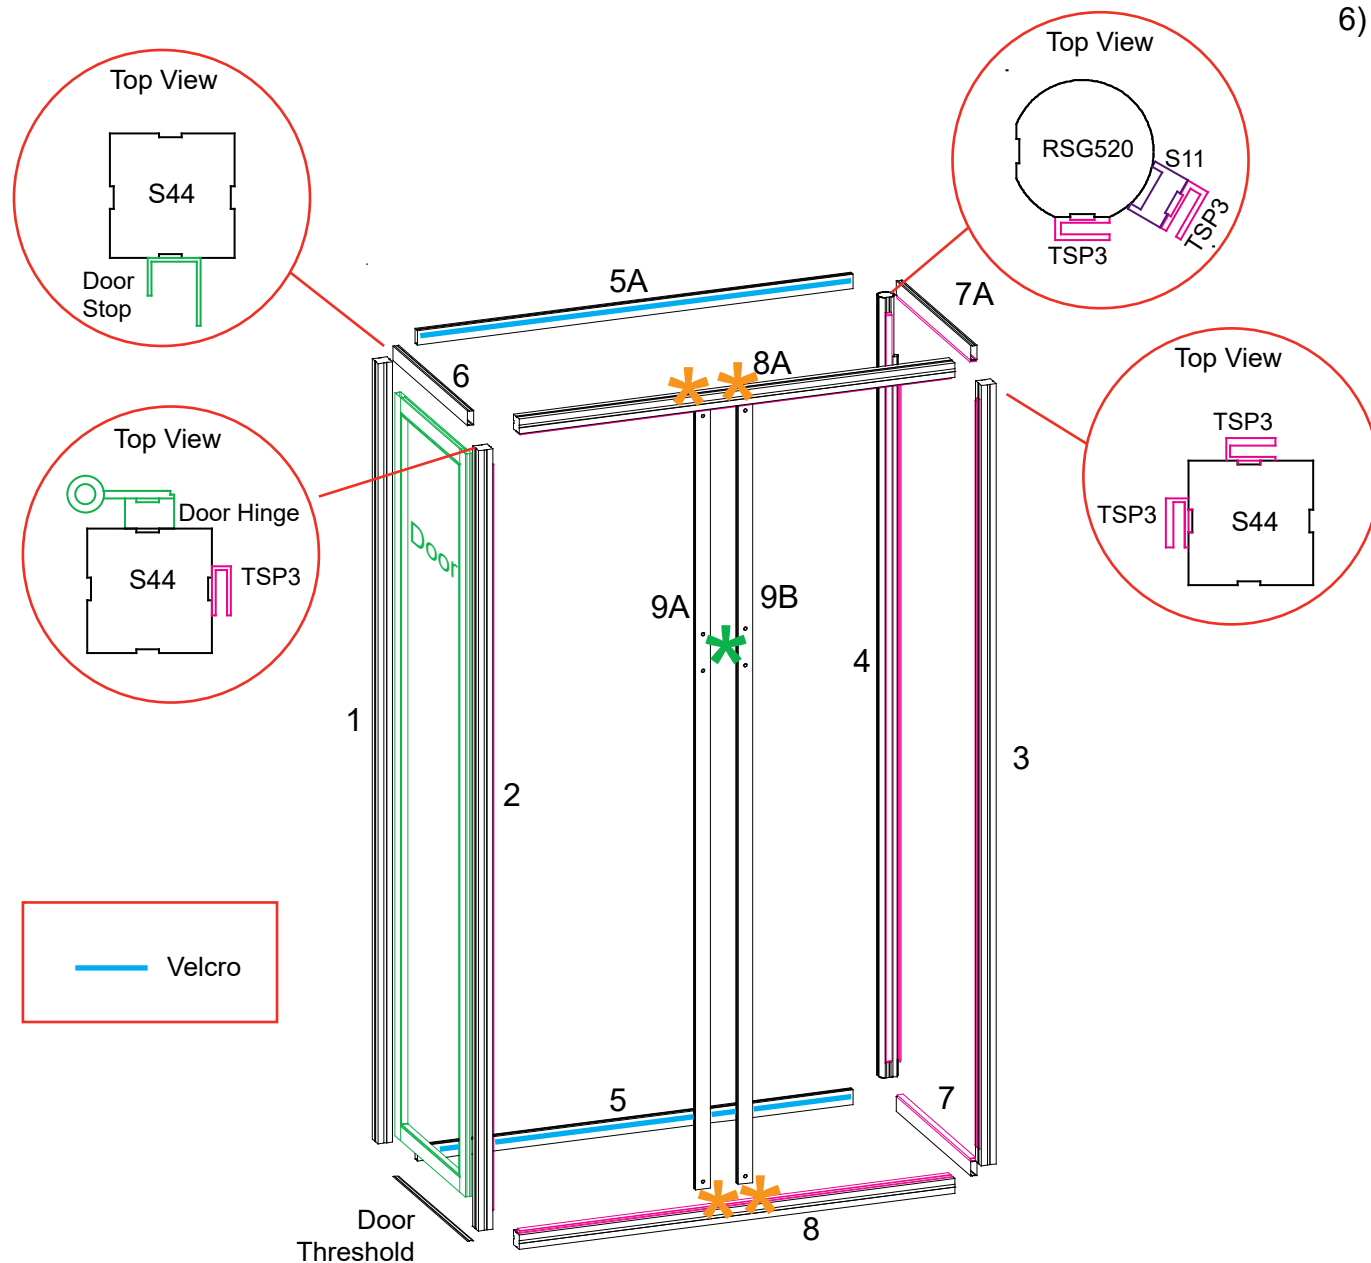

* Monitor Mount Attachment

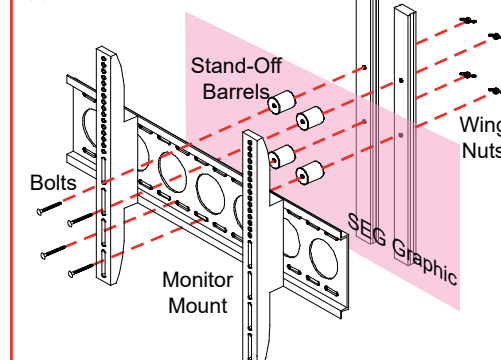


Attach monitor mount to Vertical extrusions using standoff barrels, bolts and wing nuts.
Note: Mount installs over SEG graphic.


* Vertical Attachment

Insert V4 connectors into groove of horizontal extrusion.

Tighten set screw to secure.

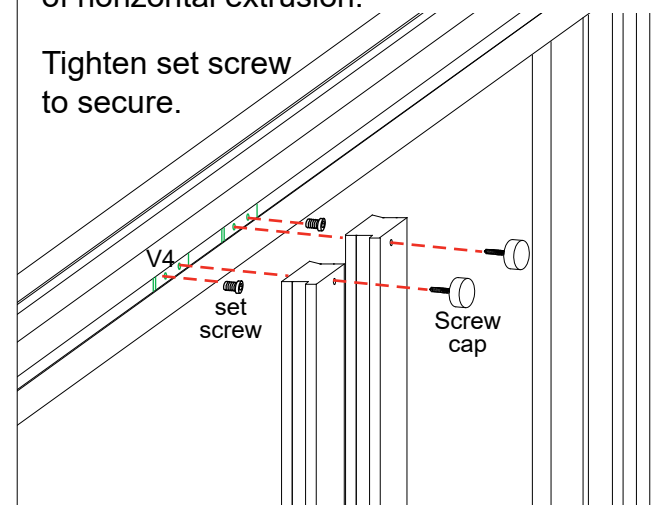

SEG Graphic Installation

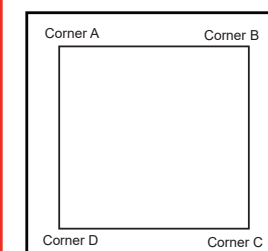

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.



Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2
Repeat Step 1 for opposite corner C, then insert corner D, to complete the installation of the corners.

Graphic Removal



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.




To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.


Item	Qty.	Description
10	1	96"h S44 Vertical Extrusion w/ attached TSP3 & LT Connector
11	1	96"h S44 Vertical Extrusion w/ attached TSP3 & LT Connector
12	1	96"h S44 Vertical Extrusion w/ attached TSP3 & LT Connector
13	1	96"h S44 Vertical Extrusion w/ attached TSP3 & LT Connector
14	1	88.583"h Z45 Vertical Extrusion w/ attached TSP3
15/15A	1/1	66"w Z45 Horizontal Extrusion w/ attached TSP3
16/16A	2/2	24"w Z45 Horizontal Extrusion w/ attached TSP3
17/17A	2/2	30"w Z45 Horizontal Extrusion w/ attached TSP3
18	2	24"w Z140 Horizontal Extrusion
19	1	Base Plate

Steps:


- 1) Attach Base Plate to vertical [14] using bolt.
- 2) Connect lower horizontals [16,18] between verticals [10,11,12,13,14].
- 3) Attach horizontals [18] between verticals [10,11] and [12,13]
- 4) Install upper horizontals [16A,17A] between verticals [10,11,12,13,14].
- 5) Connect horizontals [15,15A] between vertical [10] and vertical [4] of assembled closet.
- 6) Install Monitor Mounts to horizontals [18].
See [Monitor Mount Attachment](#) detail.
- 7) Apply SEG graphics to assembly.
- 8) Apply fabric graphic to back of assembly using Velcro.

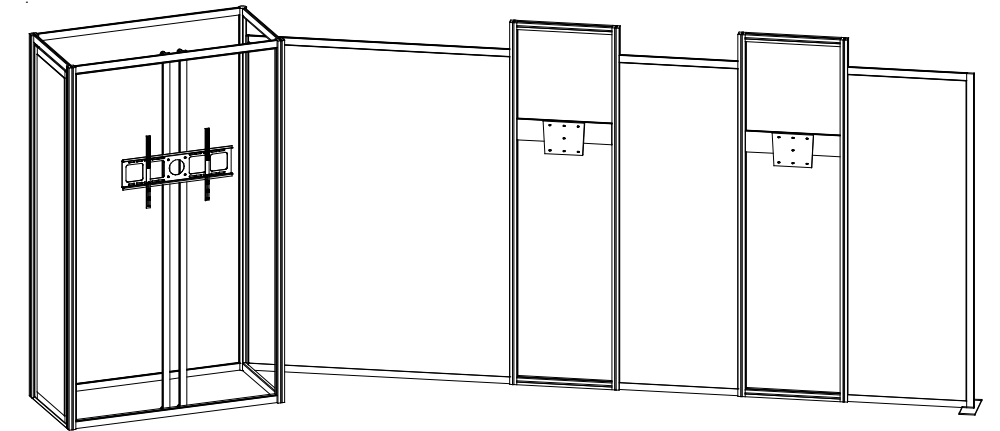

When assembled

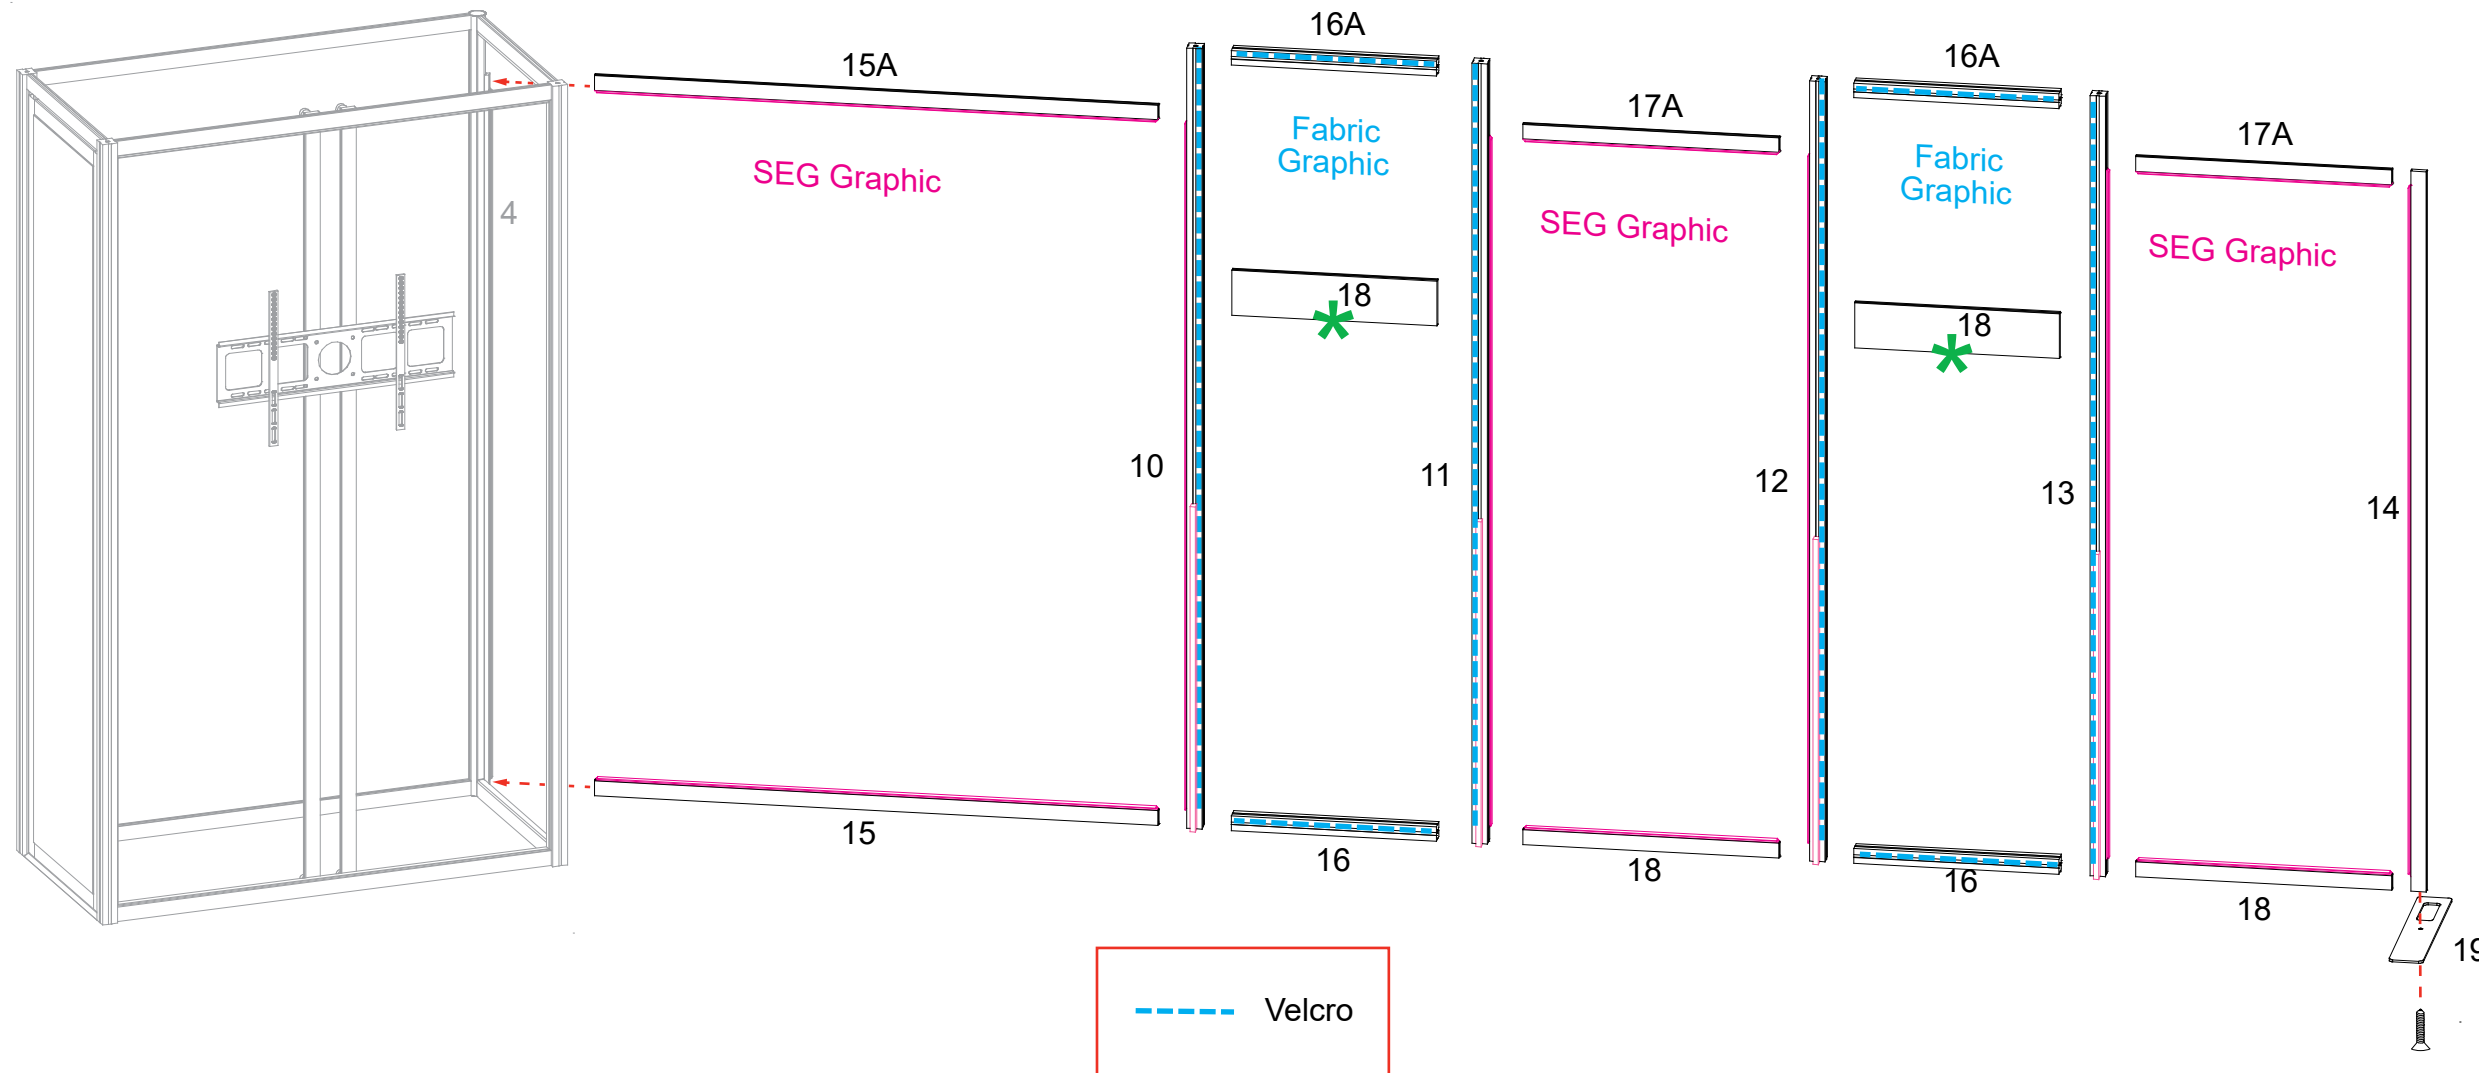



* Monitor Mount Attachment

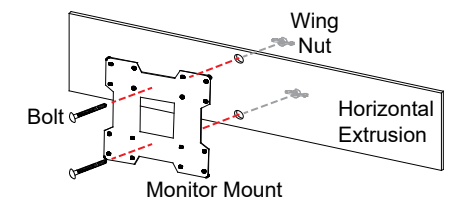

Attach Monitor Mount to Horizontal Extrusion using Bolts and Wing Nuts.

Item	Qty.	Description
1	2	16"w x 40"h Panel
2	2	40"h Connector
3	2	24.326"w x 40"h Panel w/ Door
4	2	40"h Connector
5	2	16"w x 40"h Panel

- Steps:
- 1) Connect panels & connectors in numerical order.
 - 2) Affix shelf supports to inside of assembled counters using Velcro.
 - 3) Set Counter Top onto assembled pedestals.
 - 4) Install lights as shown. See [Light Attachment](#) detail.

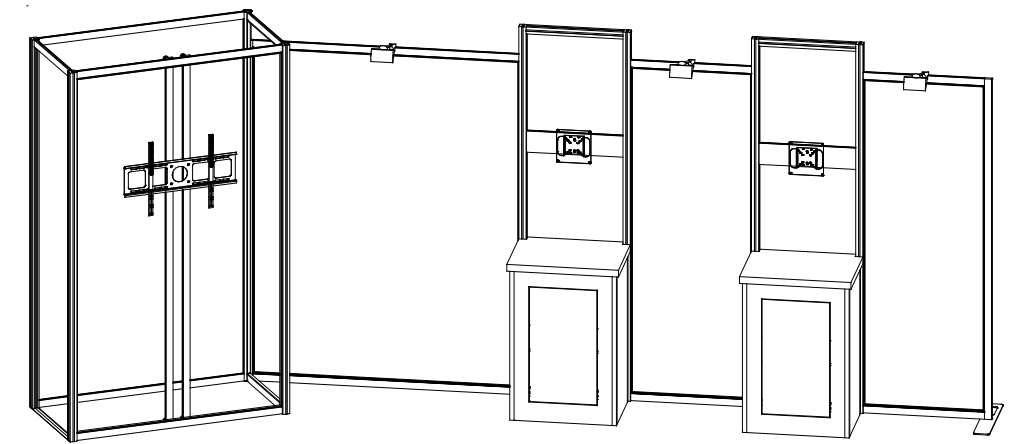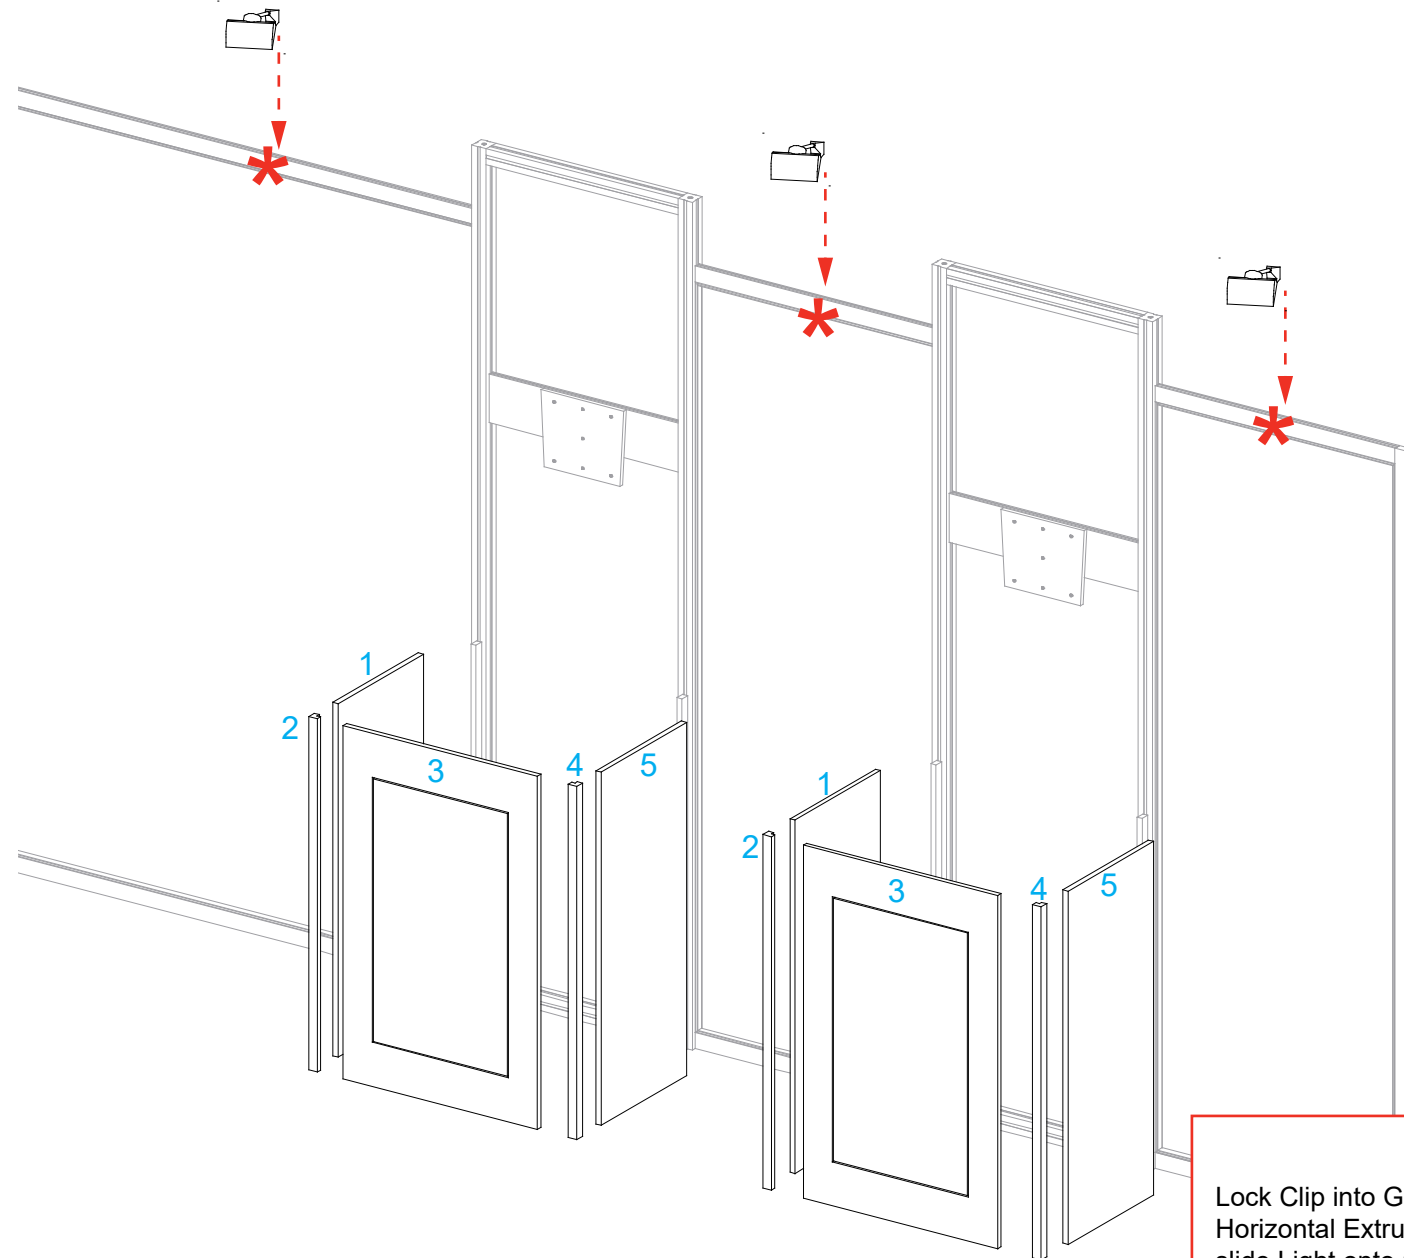

When assembled

